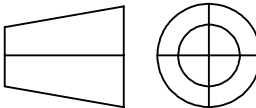


How to use Fertilizing Tank and ByPass :

- first, you have to connect Fertilizing Tank to ByPass applying a flexible pipes, as shown on the picture. Connecting the first pipe (element 7) to input socket of tank (element 5) and to the bypass valve (element 1); then do the same to connect the other pipe (element 6) to output socket of tank (element 4) and to the other bypass valve (element 2);
- now you can connect the fertilizing tank to the irrigation system using the threaded ends of the by pass;
- to load the fertilizer in the tank use the hatch on the top of the tank; close the hatch tightening the handle properly after loading;
- fertilizing tank is ready to work: you can regulate the flowrate of fertilizer using the ByPass valves;
- ball valves (elements 1 and 2) have to be closed or opened together; when the valves are opened water mixes with fertilizer and goes inside irrigation, system but when they are closed the fertilizer remains in the tank;
- using the gate (element 3) valve is important to regulate the water flowrate mix with the fertilizer.

<u>DENOMINAZIONE</u> Metal filters Irritec		irritec&siplast		
		<u>Codice</u> -----		
<u>Componente</u> IFEFV20V	<u>Q.TA:</u>	<u>Codice Componente:</u>		<u>Tratt. term.</u> -----
<u>File</u> -----	<u>Cod. Disegno</u>	<u>Scala:</u>		
<u>Note</u> -----				
<u>Caratteristiche estetiche</u> epoxy polyester paint	<u>Materiale</u> Steel	<u>Data</u> 04/05/2010	<u>Progettista</u> Alessandro Calanna	<u>N° foglio</u> ___/___